# User's Manual

## VersaPoint Rechargeable Wireless Desktop Suite

SMK-LINK

INTERLINK ELECTRONICS

# Regulatory Compliance

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

# FCC Certification

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Consult the dealer or an experienced radio/TV technician for help.

Notice: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. Extension cables are not recommended, if used, they must be shielded in order to comply with the emission limits.

# IC Certification

The term "IC" before the certification/registration number only signifies that the

Industry Canada technical specifications were met.

# Declaration of conformity

Hereby, SMK-LINK Electronics, Inc. declares that this VersaPoint Wireless Desktop Suite is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. All trademarks and registered trademarks mentioned in this document are the property of their respective owners.
Features and specifications are subject to change without notice.
© 2008 SMK-LINK Electronics, Inc.

# System Requirements

Hardware: Desktop or notebook system with 1 available USB 1.1 or 2.0 port
Operating System: Windows 2000, XP or Vista

# Package Contents

- 2.4GHz rechargeable keyboard
- 2 x AAA rechargeable Ni-MH batteries (for the keyboard)
- 2.4GHz rechargeable mouse
- 2 x AA rechargeable Ni-MH batteries (for the mouse)
- USB RF receiver with pass through charging port
- Charging cable
- User's manual

# Installing Keyboard

- Remove the battery cover located at the bottom of the keyboard.
- Insert the two supplied AAA rechargeable Ni-MH batteries (included in the package) into the battery compartment.

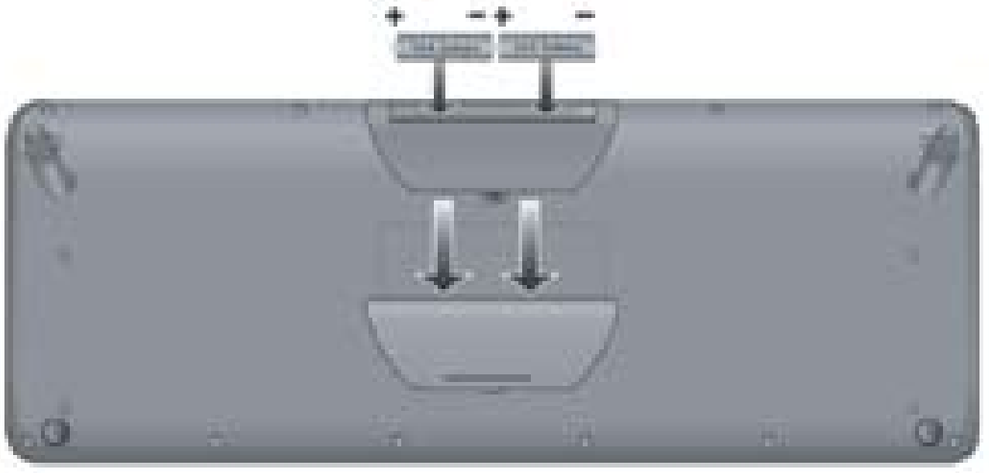

Make sure the positive (+) and negative (-) ends of the batteries match the polarity markings inside the battery compartment.

• Snap the battery cover back into position.

## Installing the mouse

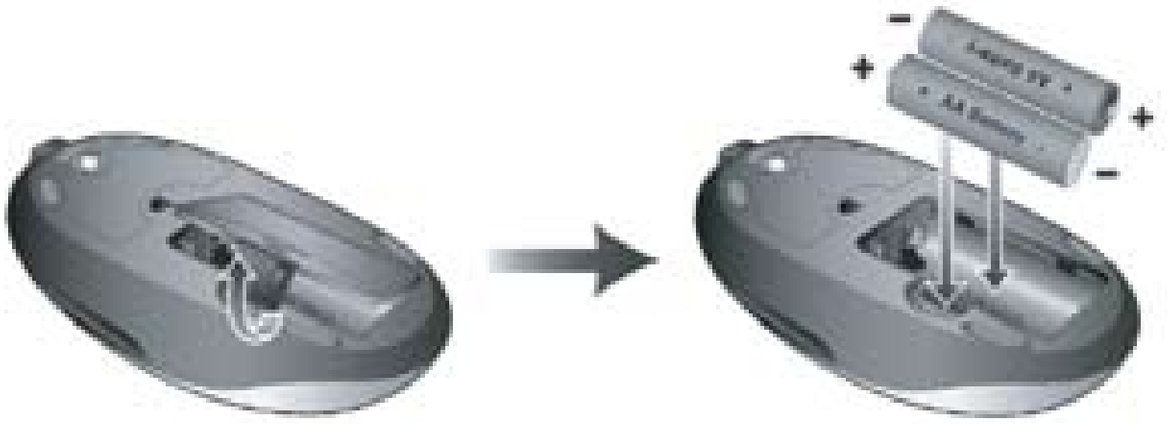

- Remove the battery cover located at the bottom of the mouse.
- Insert the two supplied AA rechargeable Ni-MH batteries (included in the package) to the battery slots. Make sure the positive (+) and negative (-) ends of the batteries match the polarity markings inside the battery compartment.
- Snap the battery cover back into position.

Do not attempt to charge non-rechargeable disposable Alkaline batteries. The batteries may leak and damage your mouse or keyboard. Use only the rechargeable Ni-MH batteries supplied. Shall replacing batteries become necessary use only rechargeable Ni-MH batteries. Do not mix new and old batteries or batteries of different brands or capacities in the products.

# Changing the batteries

• It’s recommended that you fully charge the batteries before initial use; nevertheless it’s ready for set up (see next step) anytime during charging.

• Connect the charging cable (included in the box) to the USB RF receiver’s charging port and the mouse. (Repeat this step later for the keyboard.)

• Plug the receiver’s USB connector to your computer’s available USB port.

• The initial charging process may take up to 8 hours. Subsequent recharge may require less time depending on the level of residual power in the batteries.

• Repeat these steps to charge the keyboard. Unplug the charging cable from the mouse and connect it to the keyboard’s charging port.

• The keyboard and mouse are operational during charging; you can continue use the products while charging via the USB charging cable.

• You are now ready to connect the keyboard and mouse to your

computer. (Note: it's not necessary to wait for the batteries to be fully charged before connecting to your system.)

Make sure the computer's power management is set to disable hibernation mode while the products are being charged. (Go to Control Panel, Power Options, select "Hibernate" from the tabs and uncheck the box marked "Enable Hibernation.)

## Connecting the Keyboard & Mouse to the Computer

• Connect the RF receiver to an available USB port on your computer. This may have been done when batteries are being charged.
• The radio frequency (RF) codes are factory preset for your convenience; the keyboard and mouse should be functional at this point.
• If for any reason the keyboard do not function correctly, i.e. no cursor movements, there may be other wireless devices in the vicinity operating in the same radio frequency channel.  They keyboard and mouse can be easily reset to another channel.
• To connect the mouse to your system, press the connect button located at the bottom of the RF receiver (1) while it's connected to the computer's USB port, and press the connect button located at the bottom of the mouse (2). This will reset the mouse and the RF receiver to a different channel to avoid interference.
• To connect the keyboard to your system, press the connect button located at the bottom of the RF receiver (1) while it's connected to the computer's USB port, and press the connect button located at the upper right-hand corner of the keyboard (3). This will reset the keyboard and the RF receiver to a different channel to avoid interference.
• This step can be repeated when needed.

# Operating Instructions

## Using the Keyboard

• This keyboard features the standard 104-key QWERTY configuration plus 15 convenient one-touch hot keys and a volume control wheel.

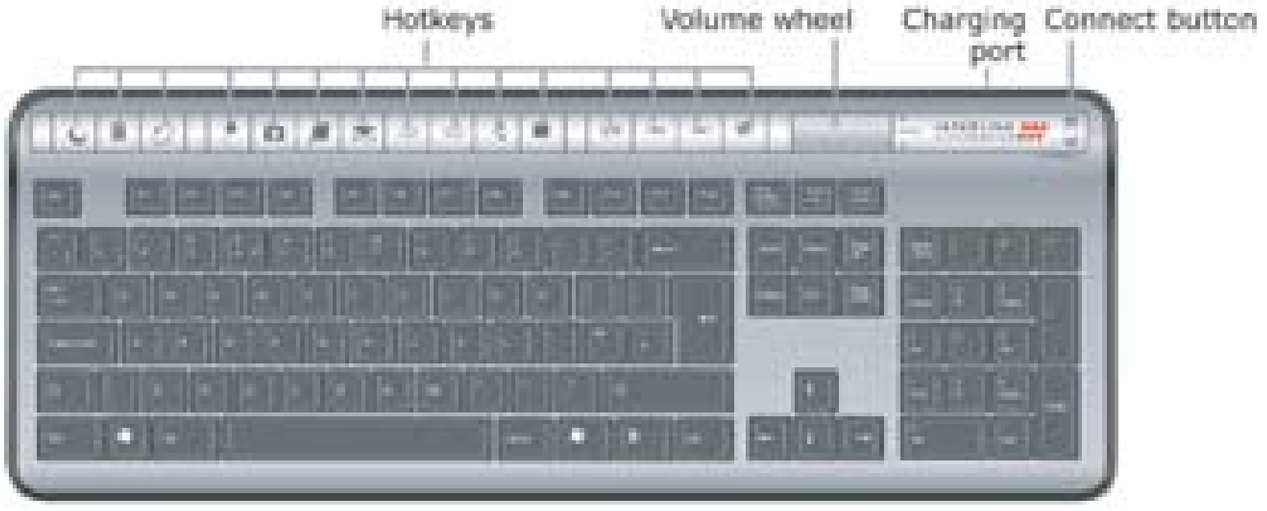

| Hotkey | Function | Hotkey | Function |
|---|---|---|---|
| Search | Opens a **Search** box in the current Web browser | Refresh | Reloads the current Web page |
| Favorites | Opens Microsoft Internet Explorer's **Favorites** folder. | Mute | Turns off or on any audio output |
| Back | Goes to the previous page in your Web browser | Email | Launches the default email application |
| Forward | Goes to the next page in your Web browser | Internet | Launches the default Web browser |
| Play/Pause | Plays or pauses a video or audio track | Calculator | Launches the default calculator application |
| Stop | Stops playing the video or audio track | Suspend | Enables power saving mode |
| Next Track | Goes to the next video or audio track | Media Select | Launches the default media player |
| Previous Track | Goes to the previous video or audio track | | |

# Using the Mouse

• This mouse features 5 pre-programmed buttons (including the scroll wheel as the 3rd button.)

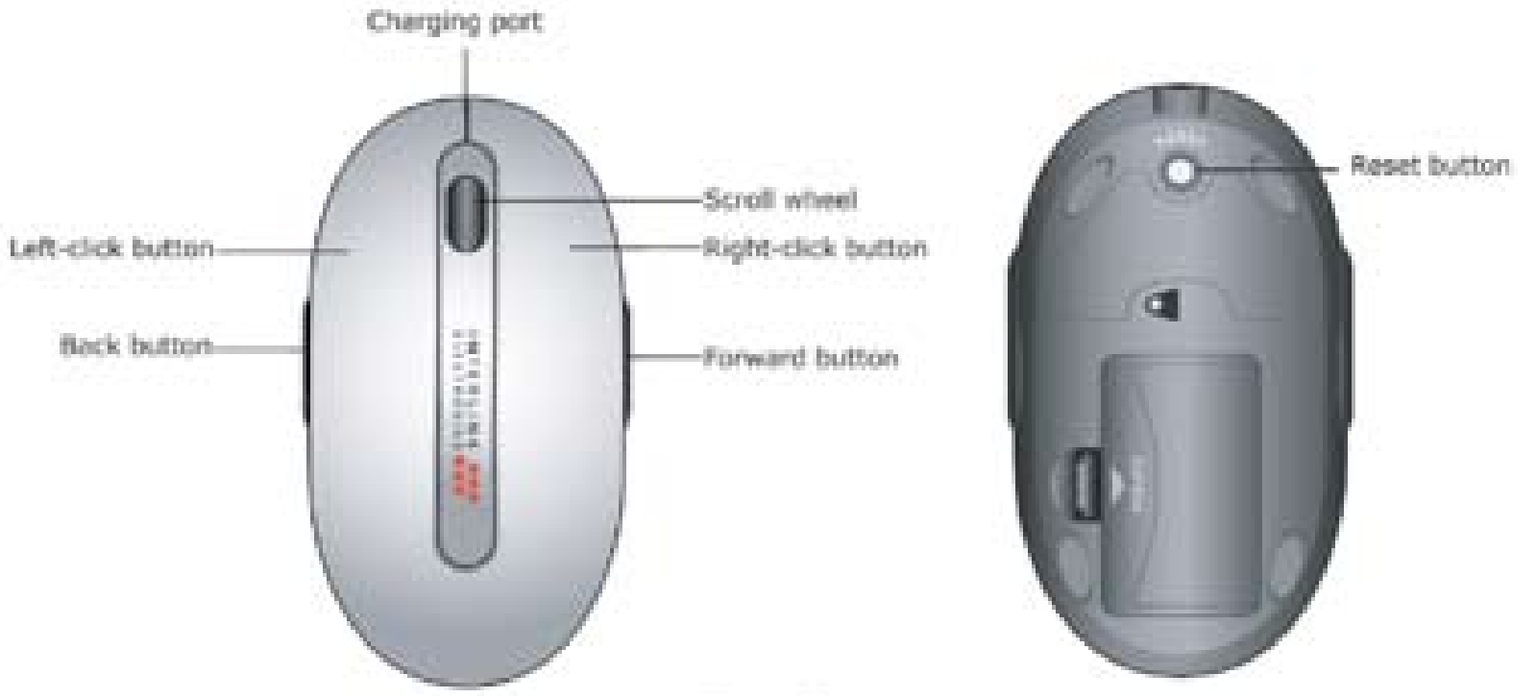


| Button | Function | Button | Function |
|---|---|---|---|
| Back | Goes to the previous page in your Web browser | Forward | Goes to the next page in your Web browser |

# Using the Receiver

• This USB RF receiver features 3 LED indicators for your convenience.

# Operating Tips & Trouble Shooting

• Optical mouse works best on non-reflective, non-white, surface. If cursor movements are lagging, placing the mouse on a mouse pad will help. Darker surface requires more energy to operate thus consumes more battery power.

• If you will not use the keyboard and mouse for a long period of time remove the batteries from the respective battery compartments.

• When the keyboard and/or mouse behave erratically it may be an indication that the battery power is low. Follow the instructions in Charging the Batteries section to recharge the batteries if necessary. The keyboard and mouse are functional during charging.

• Once the keyboard and mouse are connected to the RF receiver they stay connected even when the device is turned off and out of range. If for any reason the connection to the system is lost, first check if the RF receiver is still plugged in to your computer and verify that your keyboard and mouse are within 33-foot/10-meter from your computer. If the connection is lost it can be fixed by following the instructions in the Connecting the Keyboard and Mouse to the Computer section to reconnect the devices.

# Warranty

SMK-LINK warrants to the original end-user purchaser of the Product (“you”) that the Product, excluding batteries, will be free from defects in materials or workmanship under normal use and service for one-year from date of purchase. Dated invoice or sales receipt is necessary to accompany the Product returned for warranty service consideration. Any Product repaired or replaced under the terms of the warranty is covered for the remainder of the original warranty period or ninety (90) days from the date of service or return shipping, whichever is longer. If the Product becomes defective in materials or workmanship during the warranty period, SMK-LINK will, at its option, either repair or replace it with a more current or upgraded model if the originally purchased model is not available.

This warranty does not cover products which have been subjected to misuse, accident, physical damage, improper installation, abnormal operation or handling, neglect, inundation or fire, or when product regulatory label has been removed, altered or rendered illegible; nor does it cover accessory and consumable items. In no case shall SMK-LINK be liable for any indirect special, incidental, or

consequential damages based upon breach of warranty, breach of contract, negligence, strict tort or any other legal theory.

Such damages include, but are not limited to, loss of profits, loss of savings or revenues, inability to use the product or any associated equipment, cost of capital, cost of any substitute equipment, facilities or services, claims by third parties other than you, and injury to property. SMK-LINK's total liability for damages for any cause related to, or arising out of, the use or inability to use the product, shall not exceed the original price paid for the product even if SMK-LINK has been informed of such possibility. If your Product requires warranty service, you must first contact SMK-LINK Product Support to receive an RMA Number. The contact information can be found on SMK-LINK website: http://www.smklink.com/support/contactsupport.html.

This warranty does not affect your statutory right and you may also have other rights which vary from state to state. Unless modified in writing, signed by both you and SMK-LINK, this warranty is understood to be the complete and exclusive agreement between the parties, superseding all prior agreements, oral or written, and all other communica¬tions between the parties relating to the subject matter of this warranty.

# Product Support

For technical support please contact SMK-LINK Electronics at http://www.smklink.com/support

# Thank you

Thank you for purchasing the SMK-LINK VersaPoint Wireless Desktop Suite. We know you had other choices and we appreciate that you chose SMK-LINK Electronics for your product needs. So that we may better serve you in the future, please register online at www.smklink.com/register.